


Figure 1

FIGURE 2 – Try-on Garment (200)

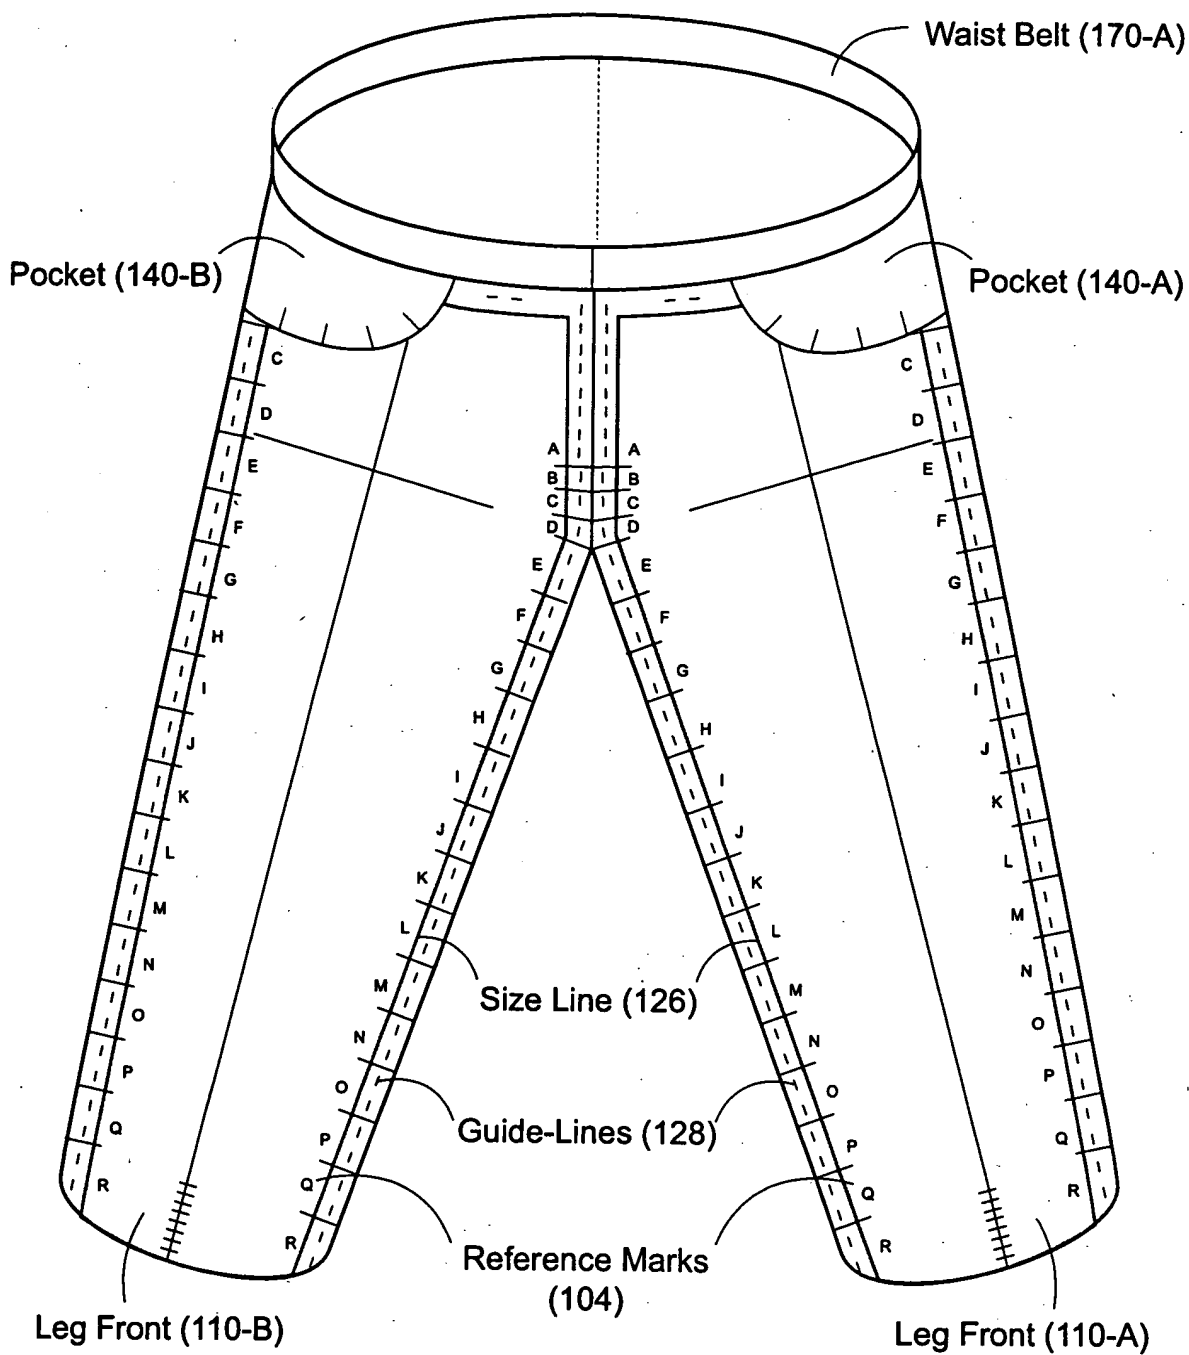

Base Pattern (210)

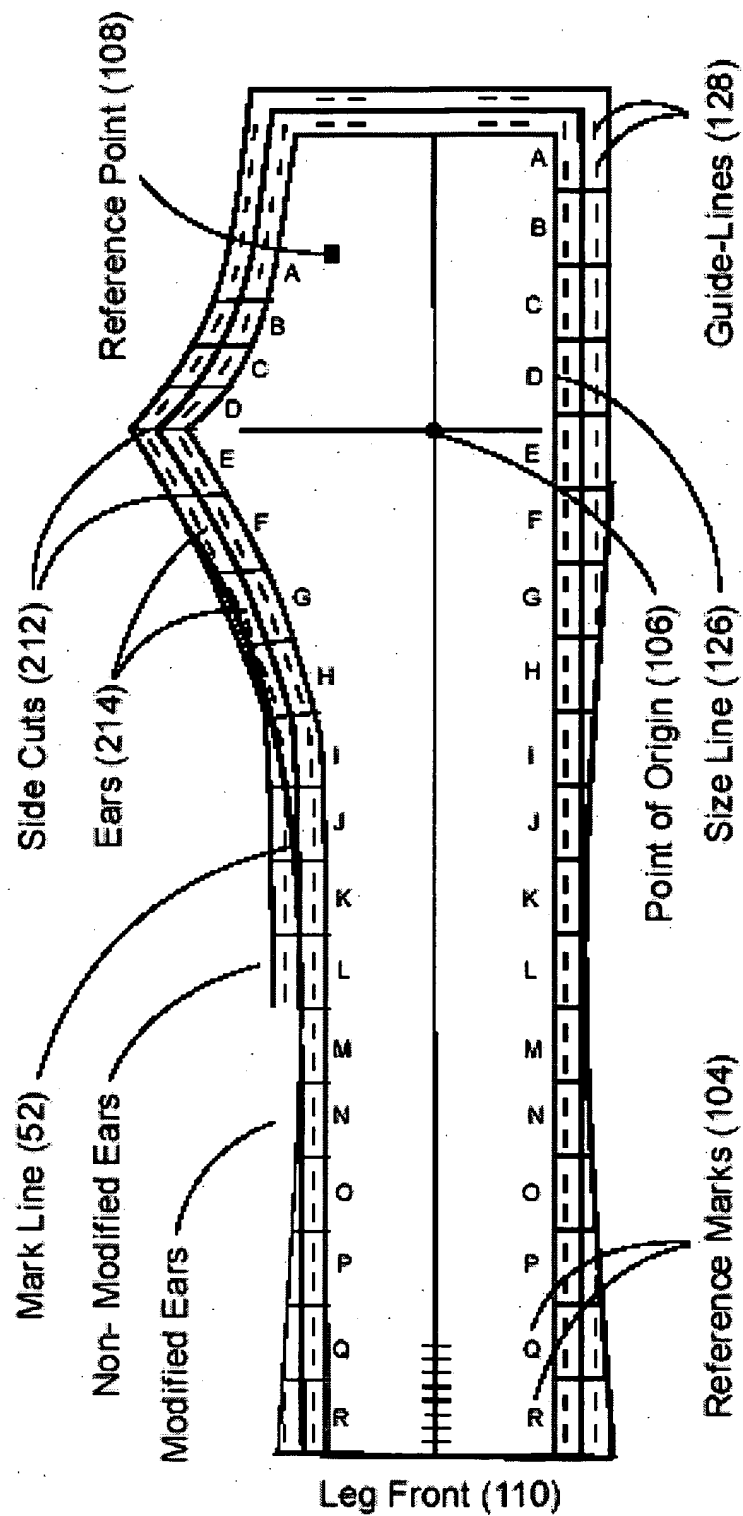


Figure 3

Figure 4A – Scanner System (10)

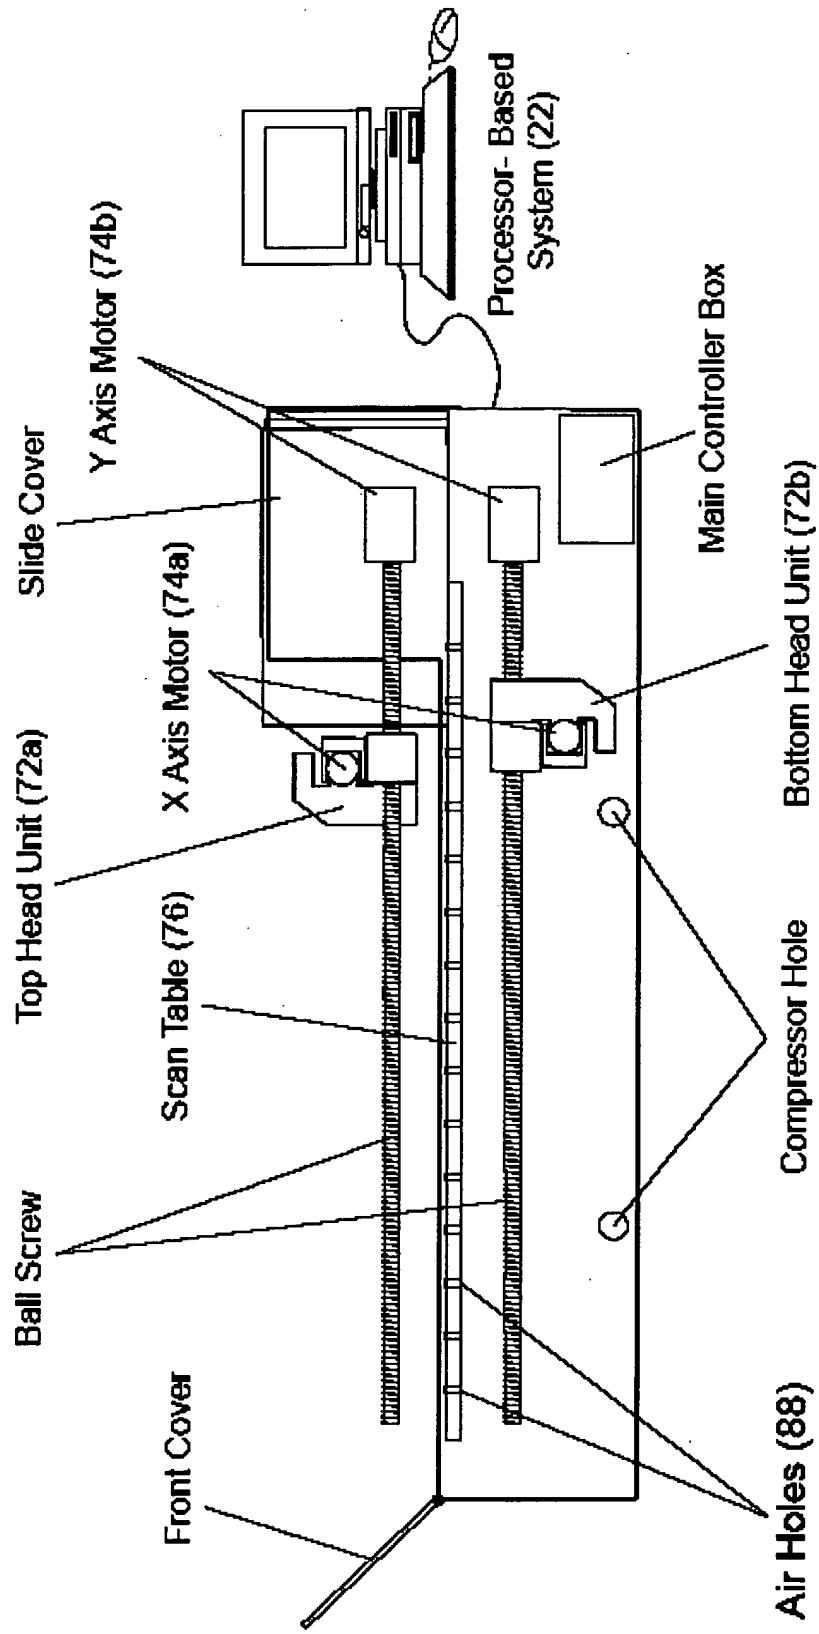


Figure 4B – Pattern Holder (12)

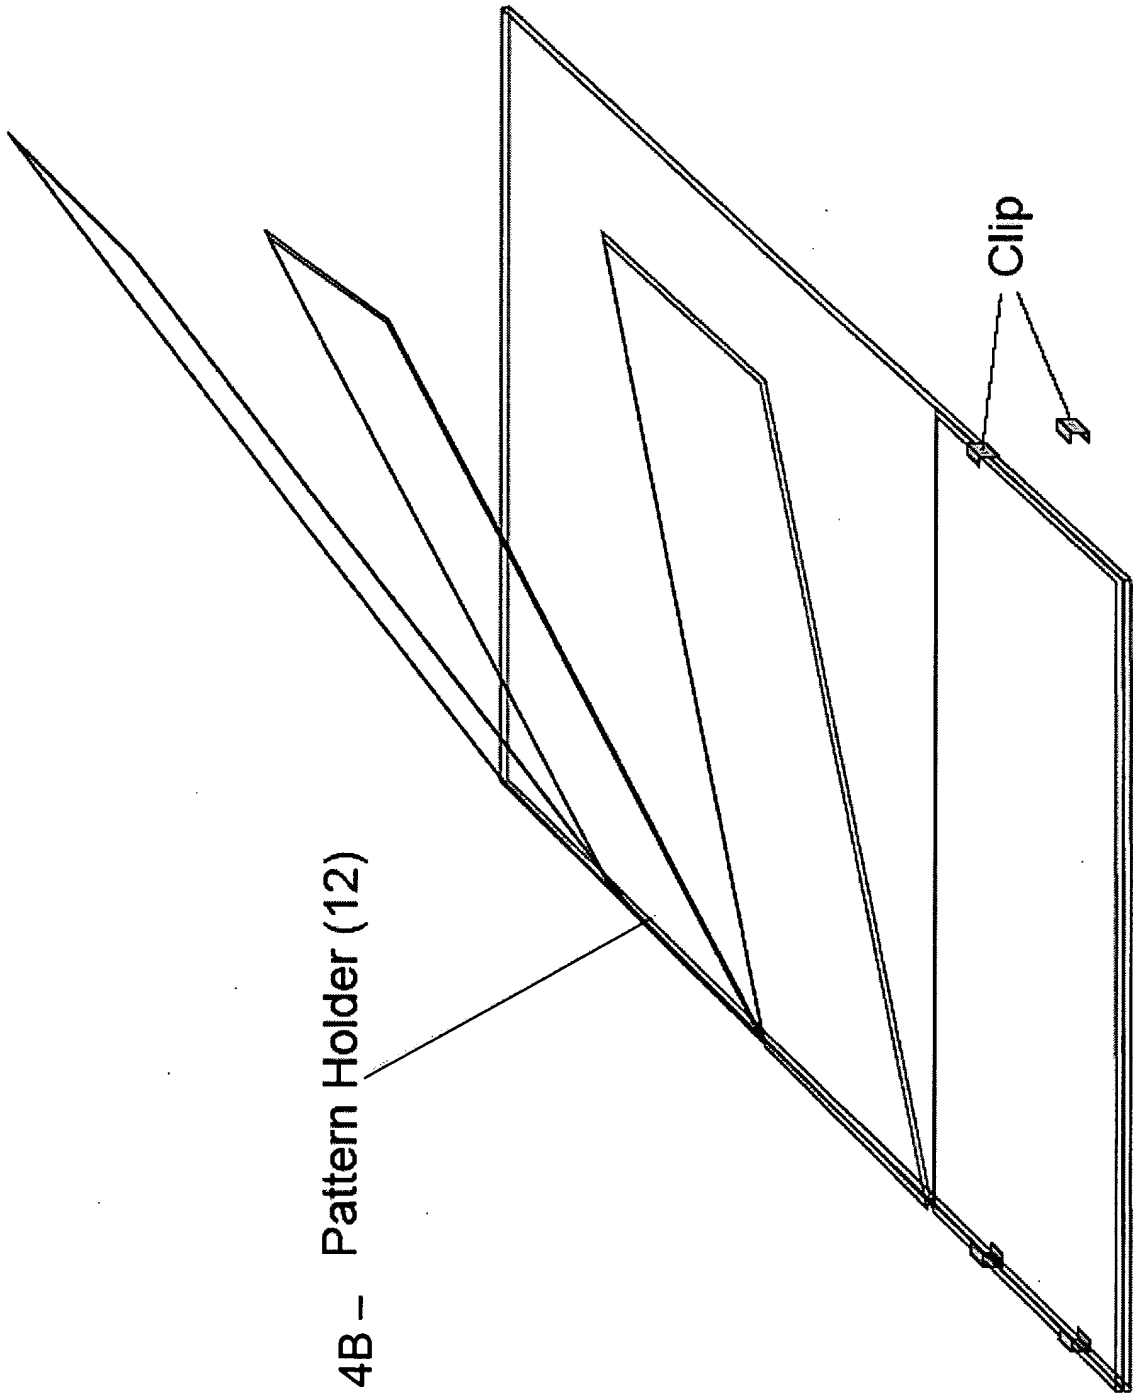
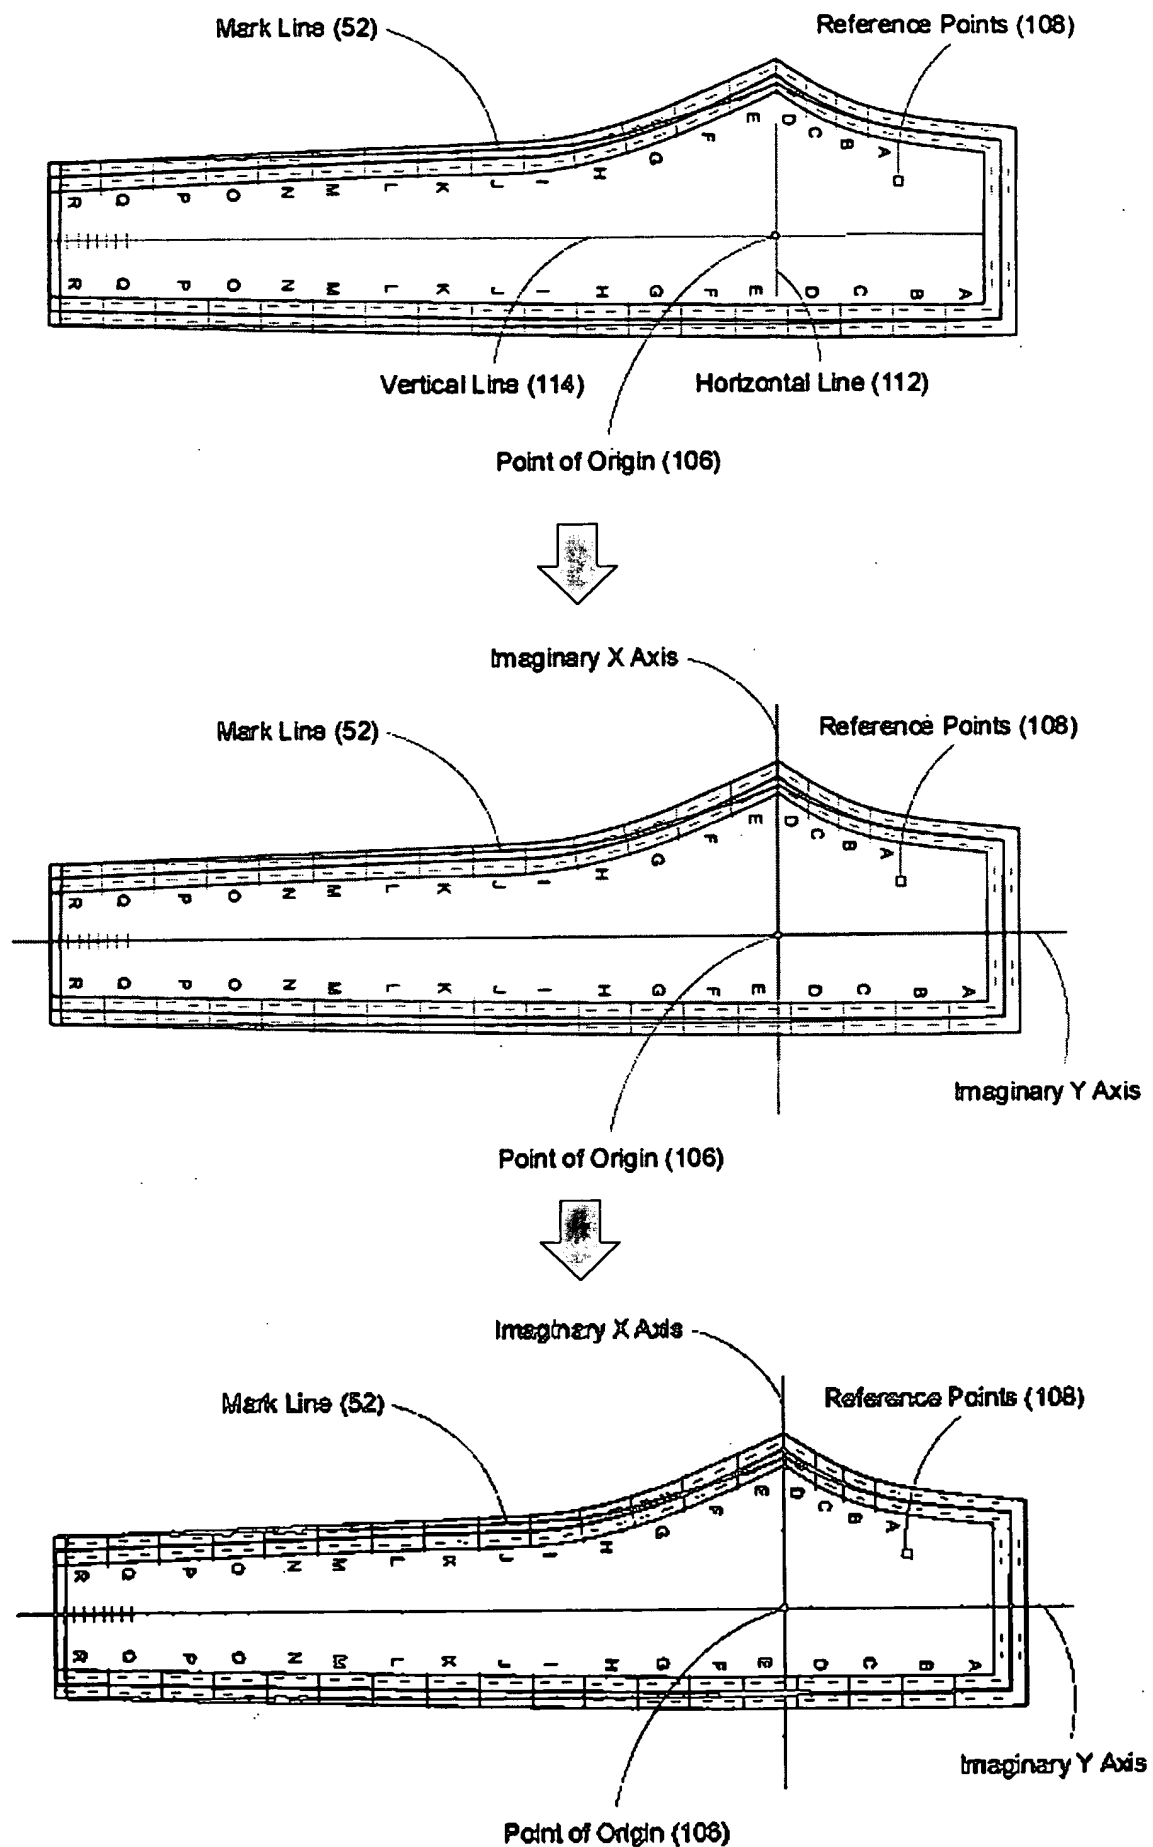


Figure 5A



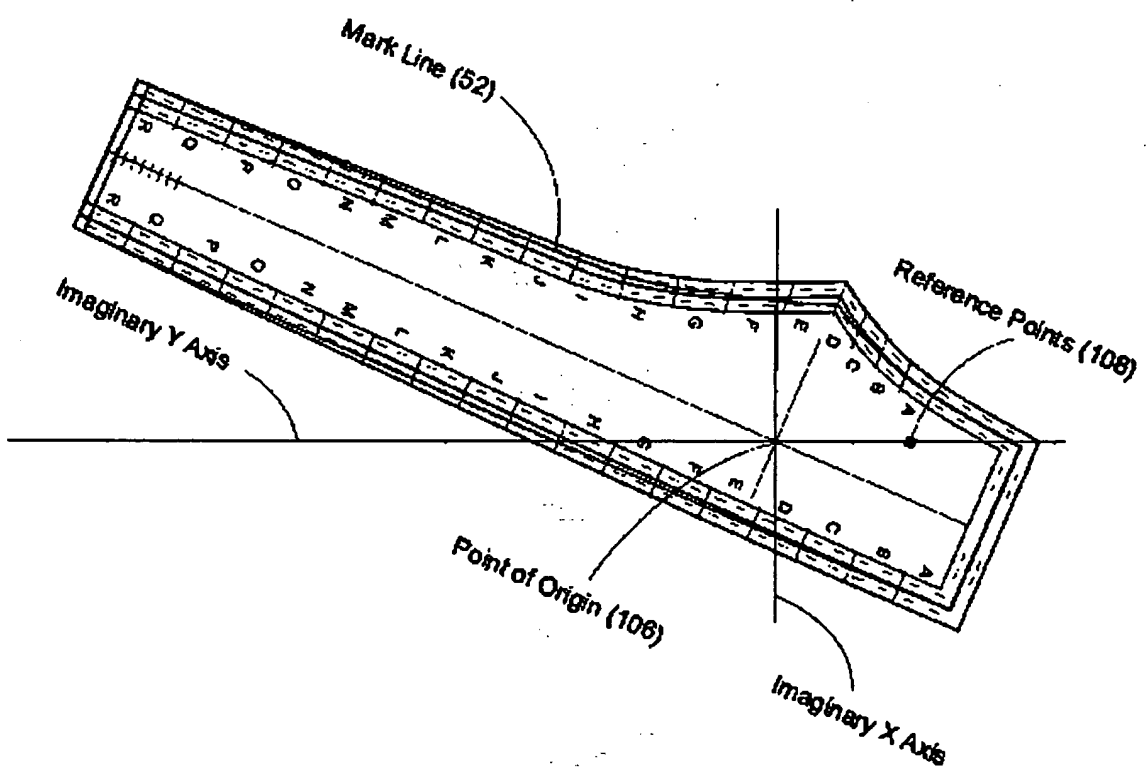
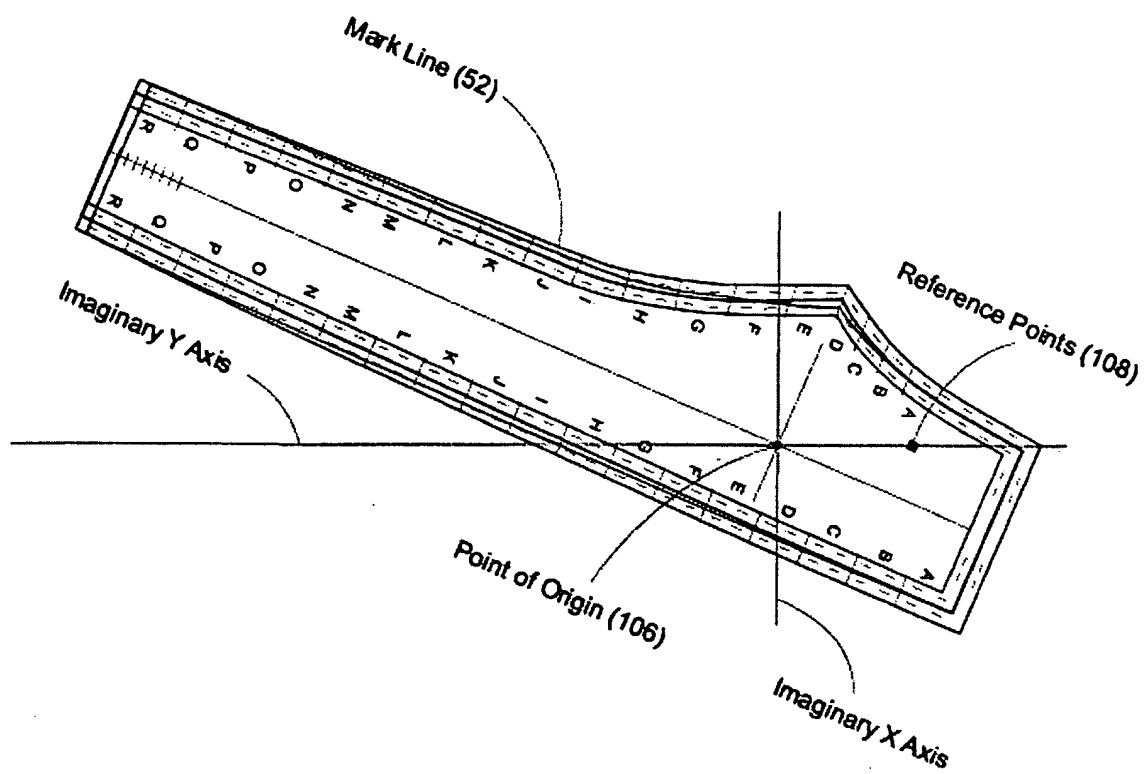


Figure 5B

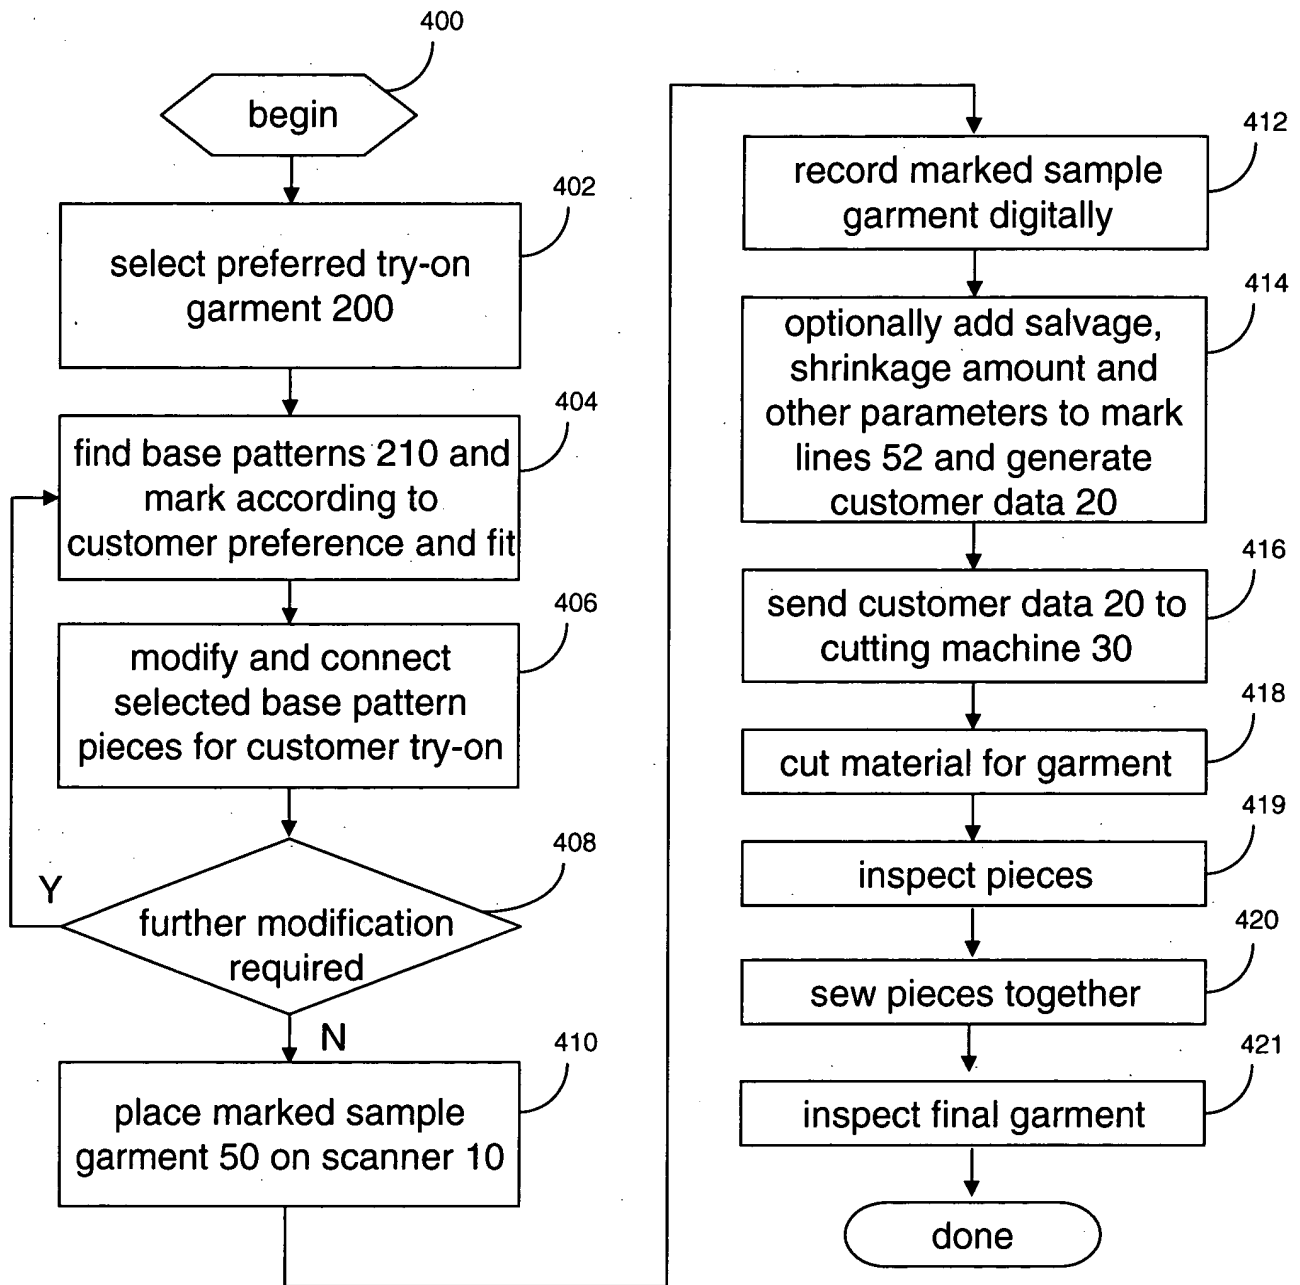


Figure 6

Figure 7A

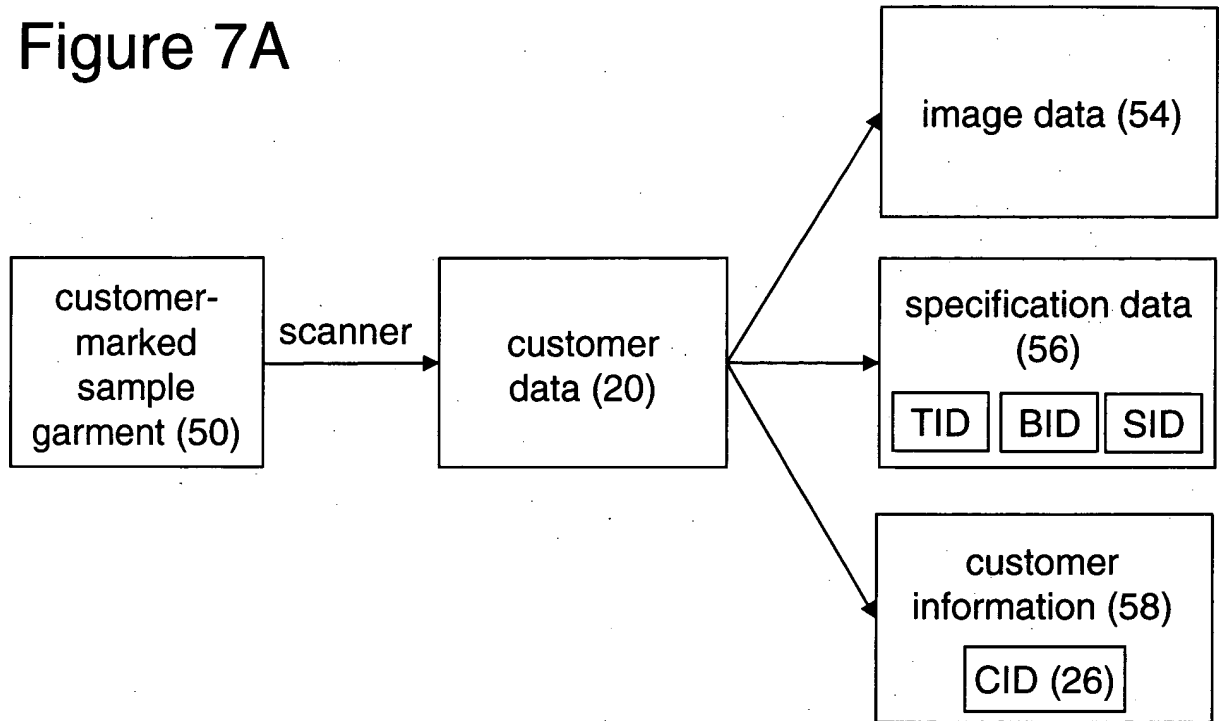
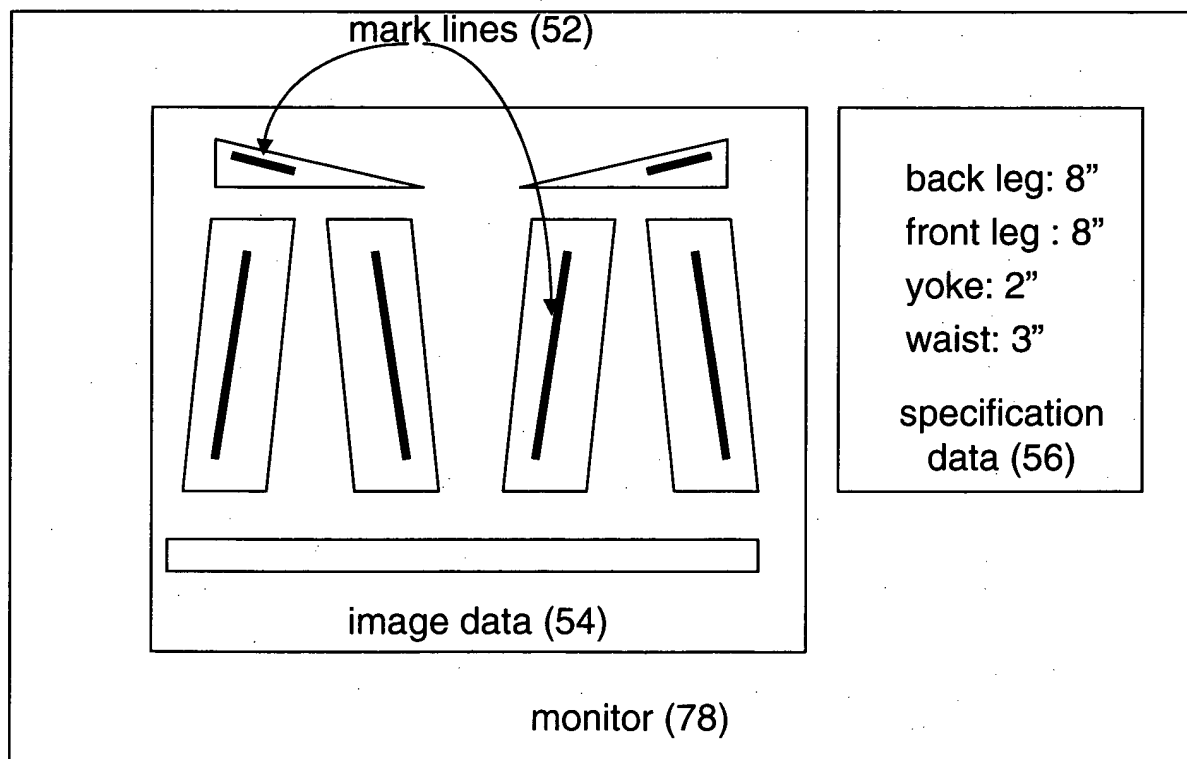


Figure 7B



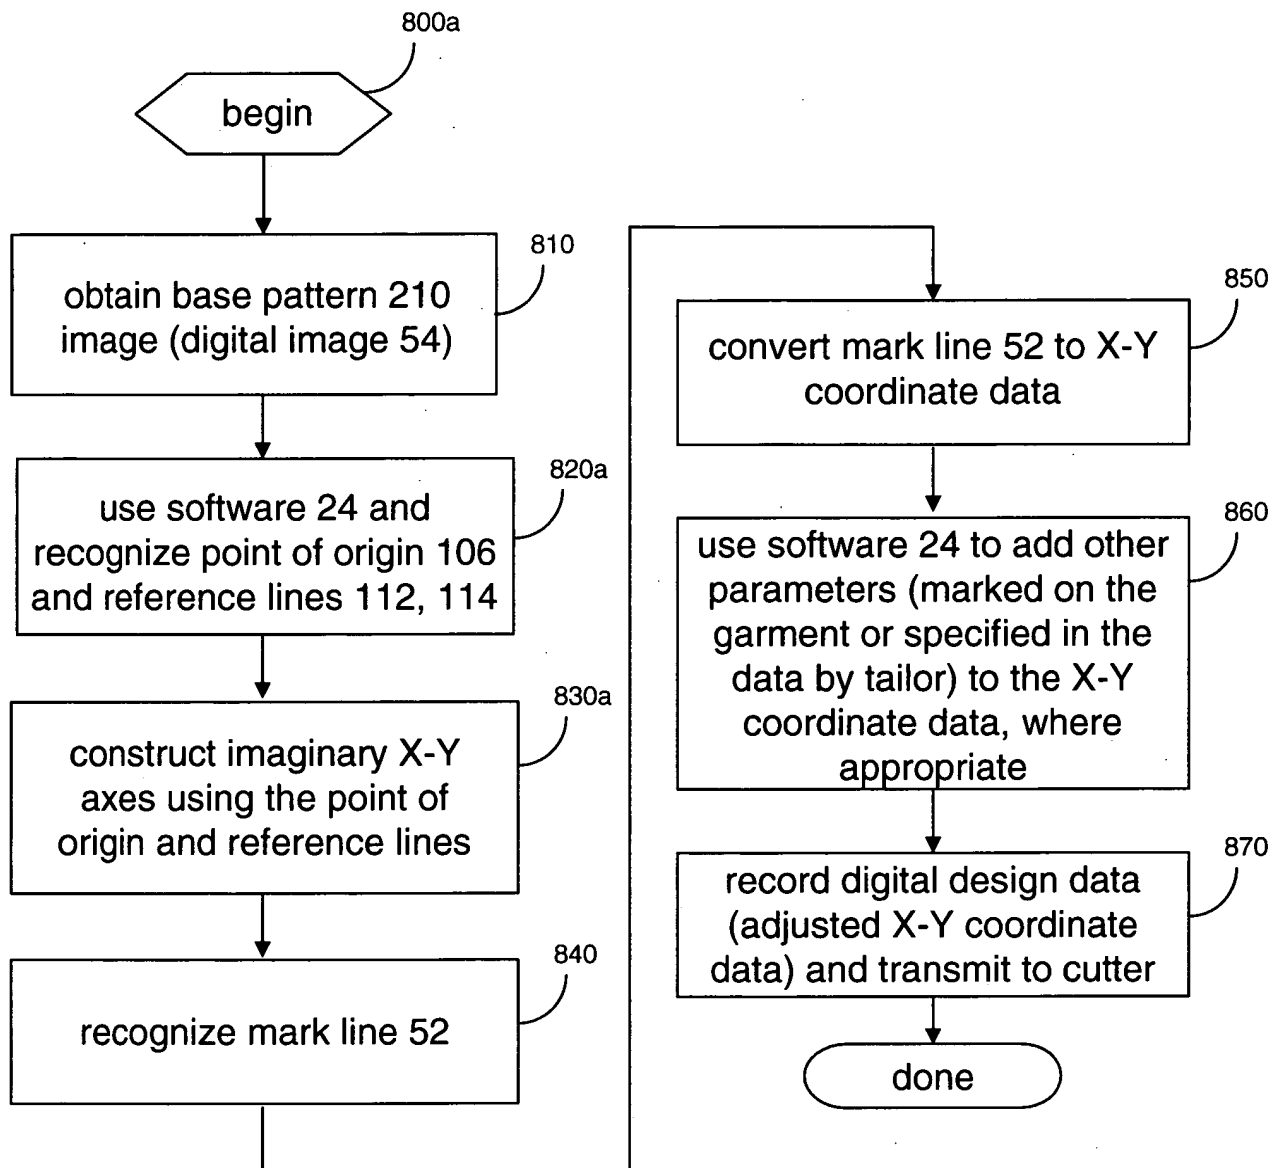


Figure 8A

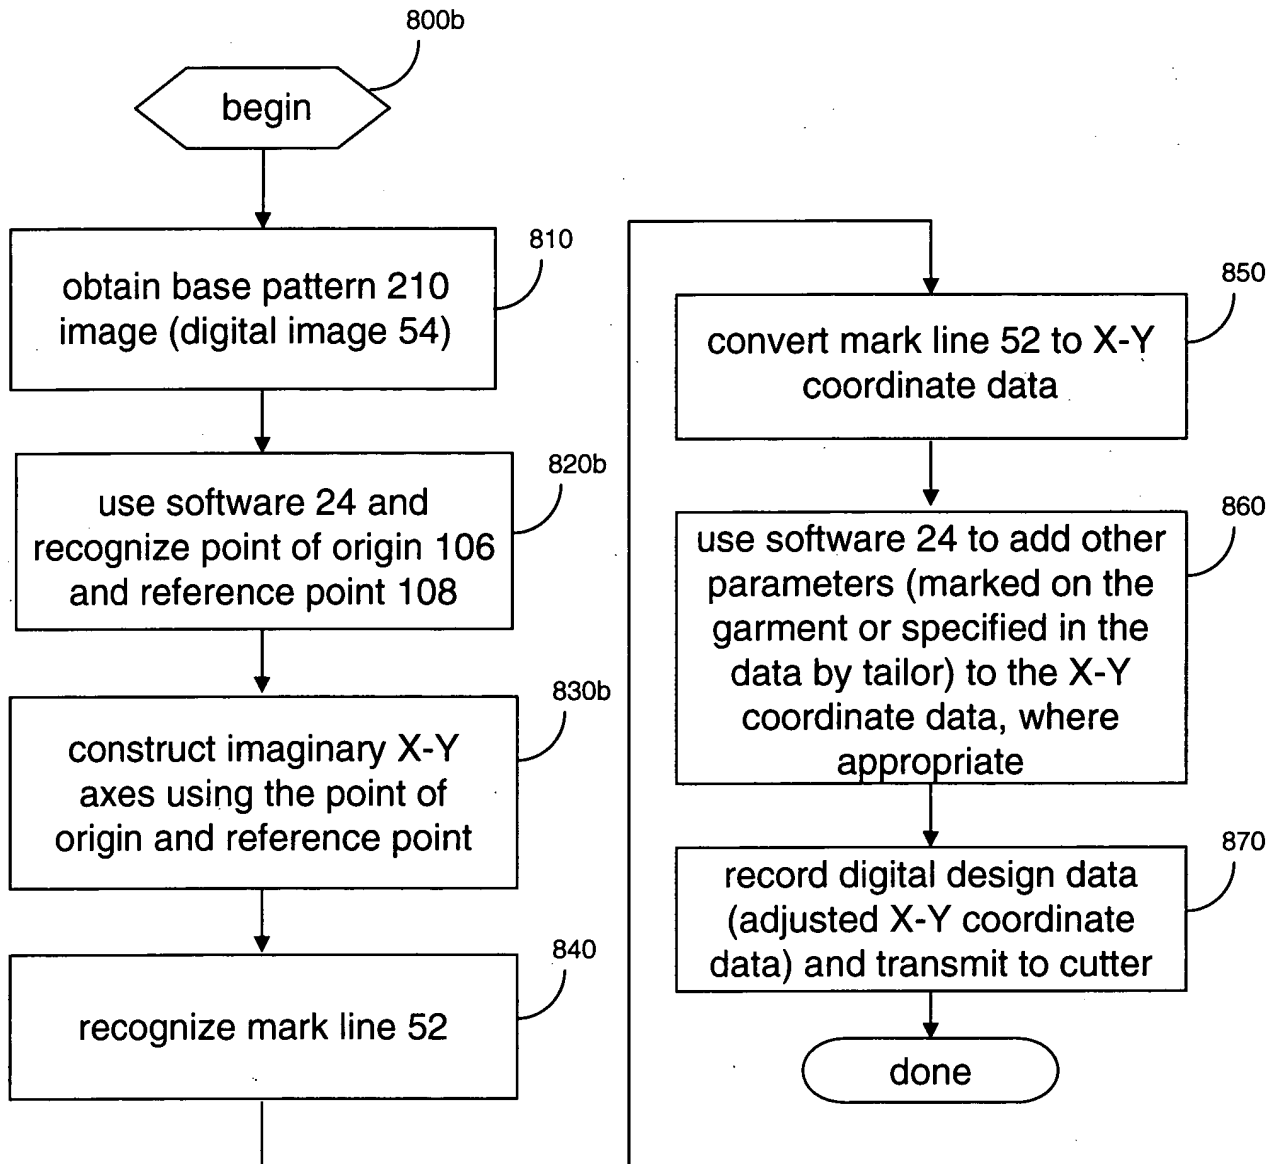


Figure 8B

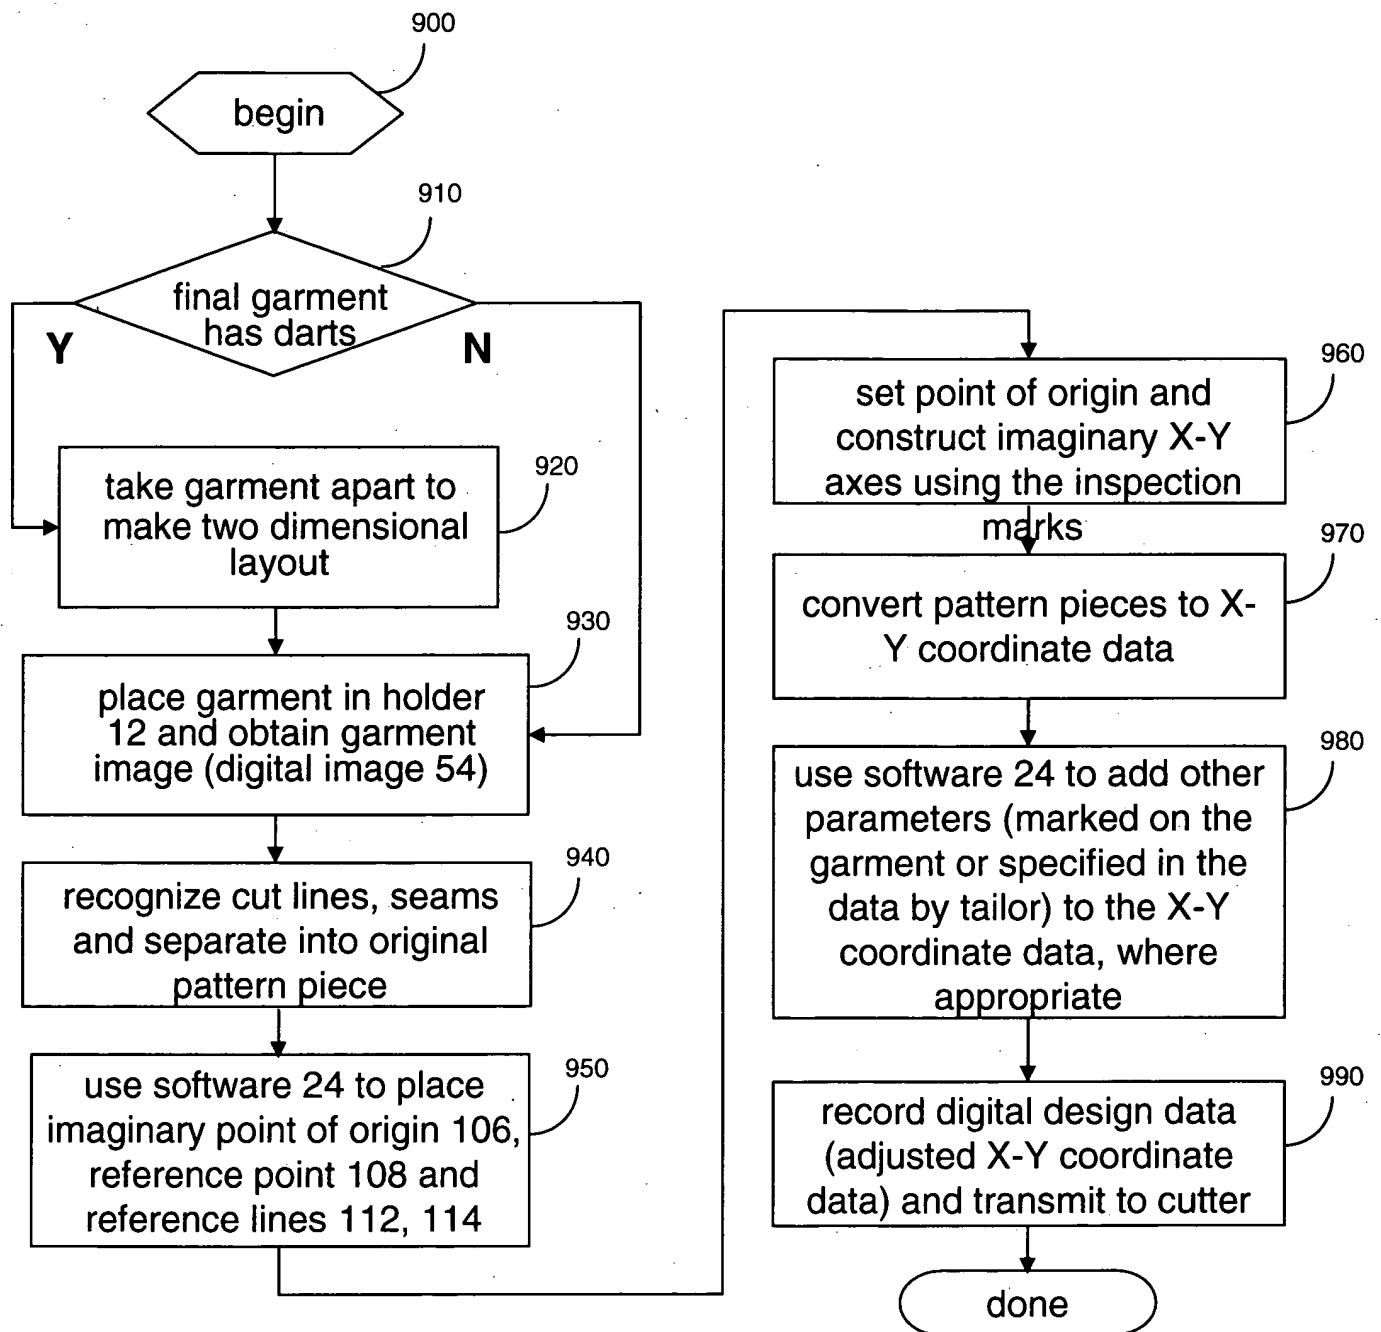


Figure 9

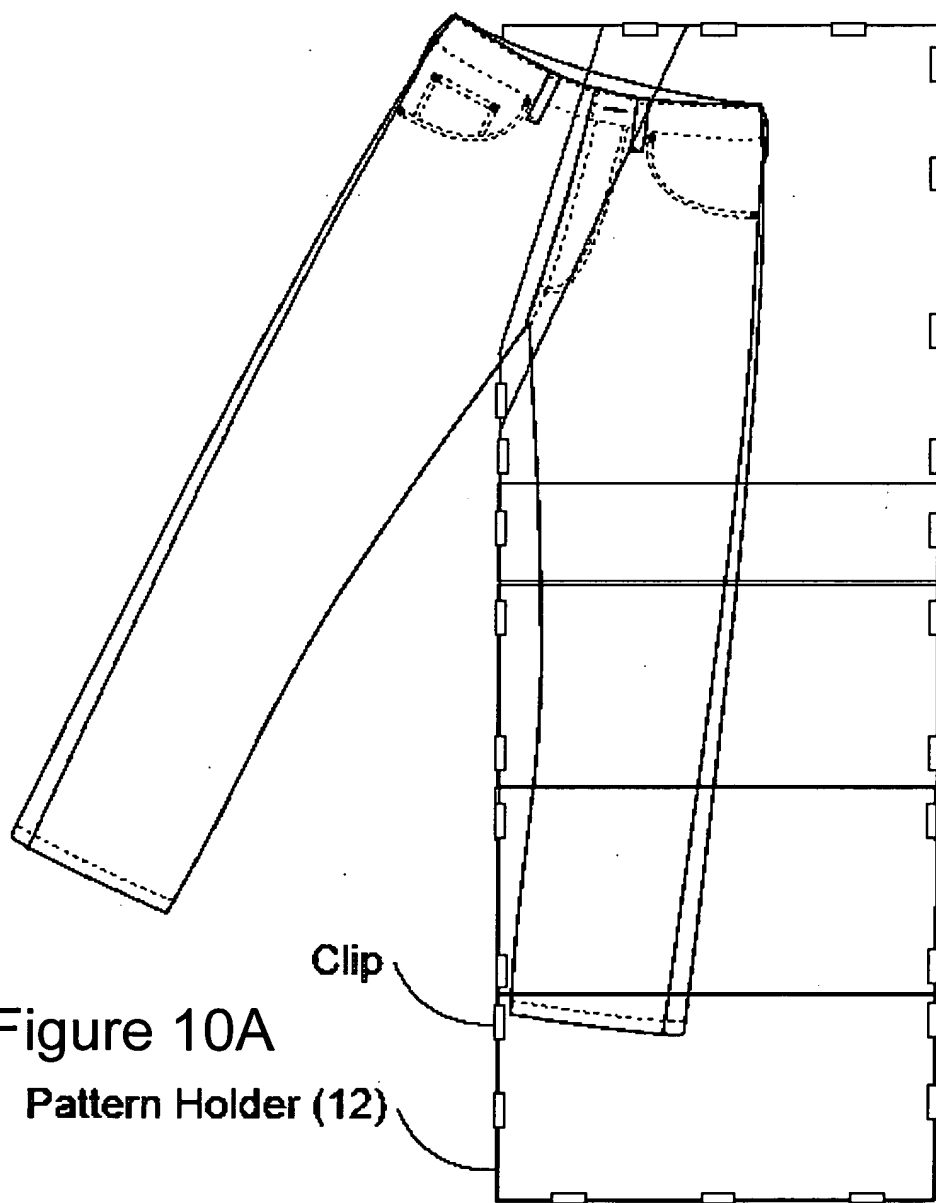


Figure 10A
Pattern Holder (12)

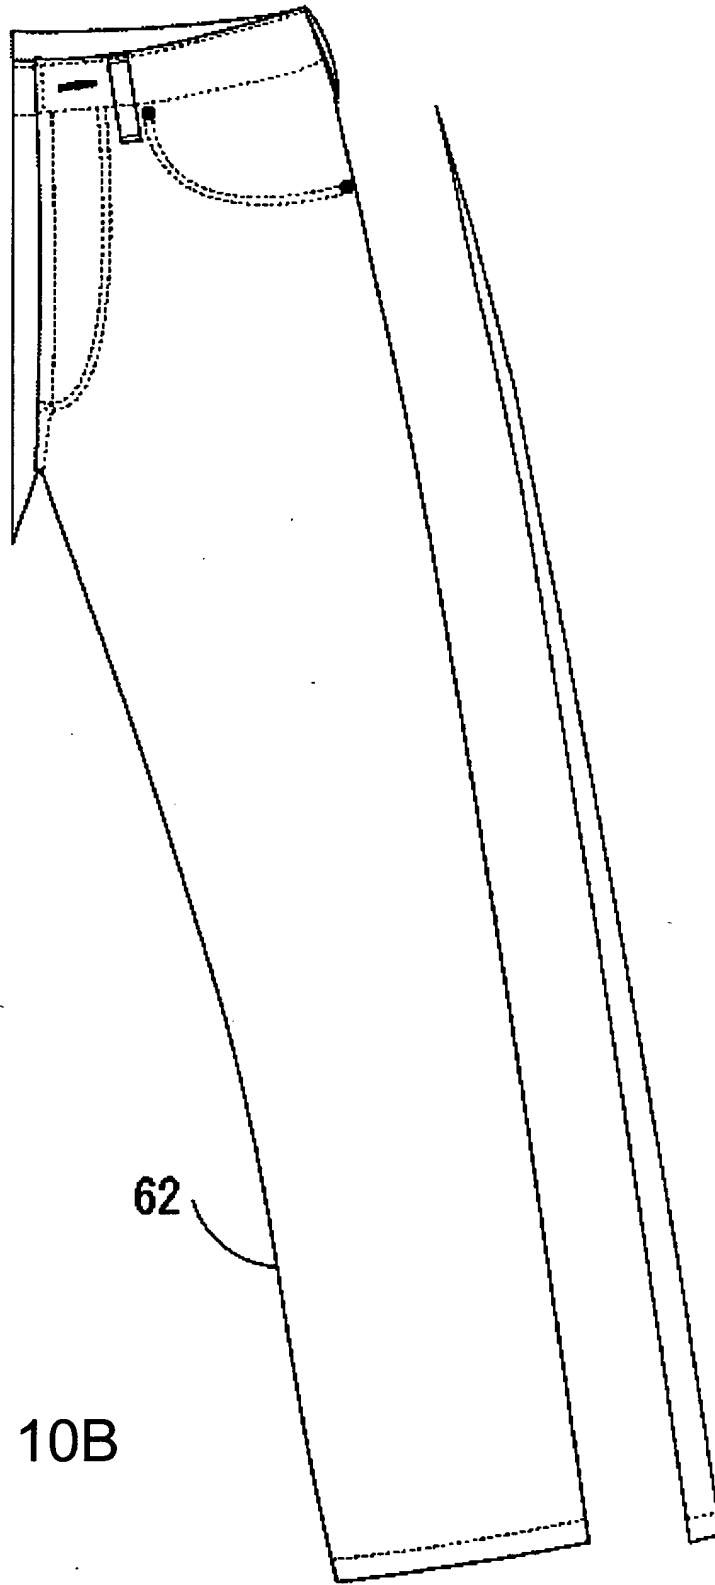


Figure 10B

Figure 11A

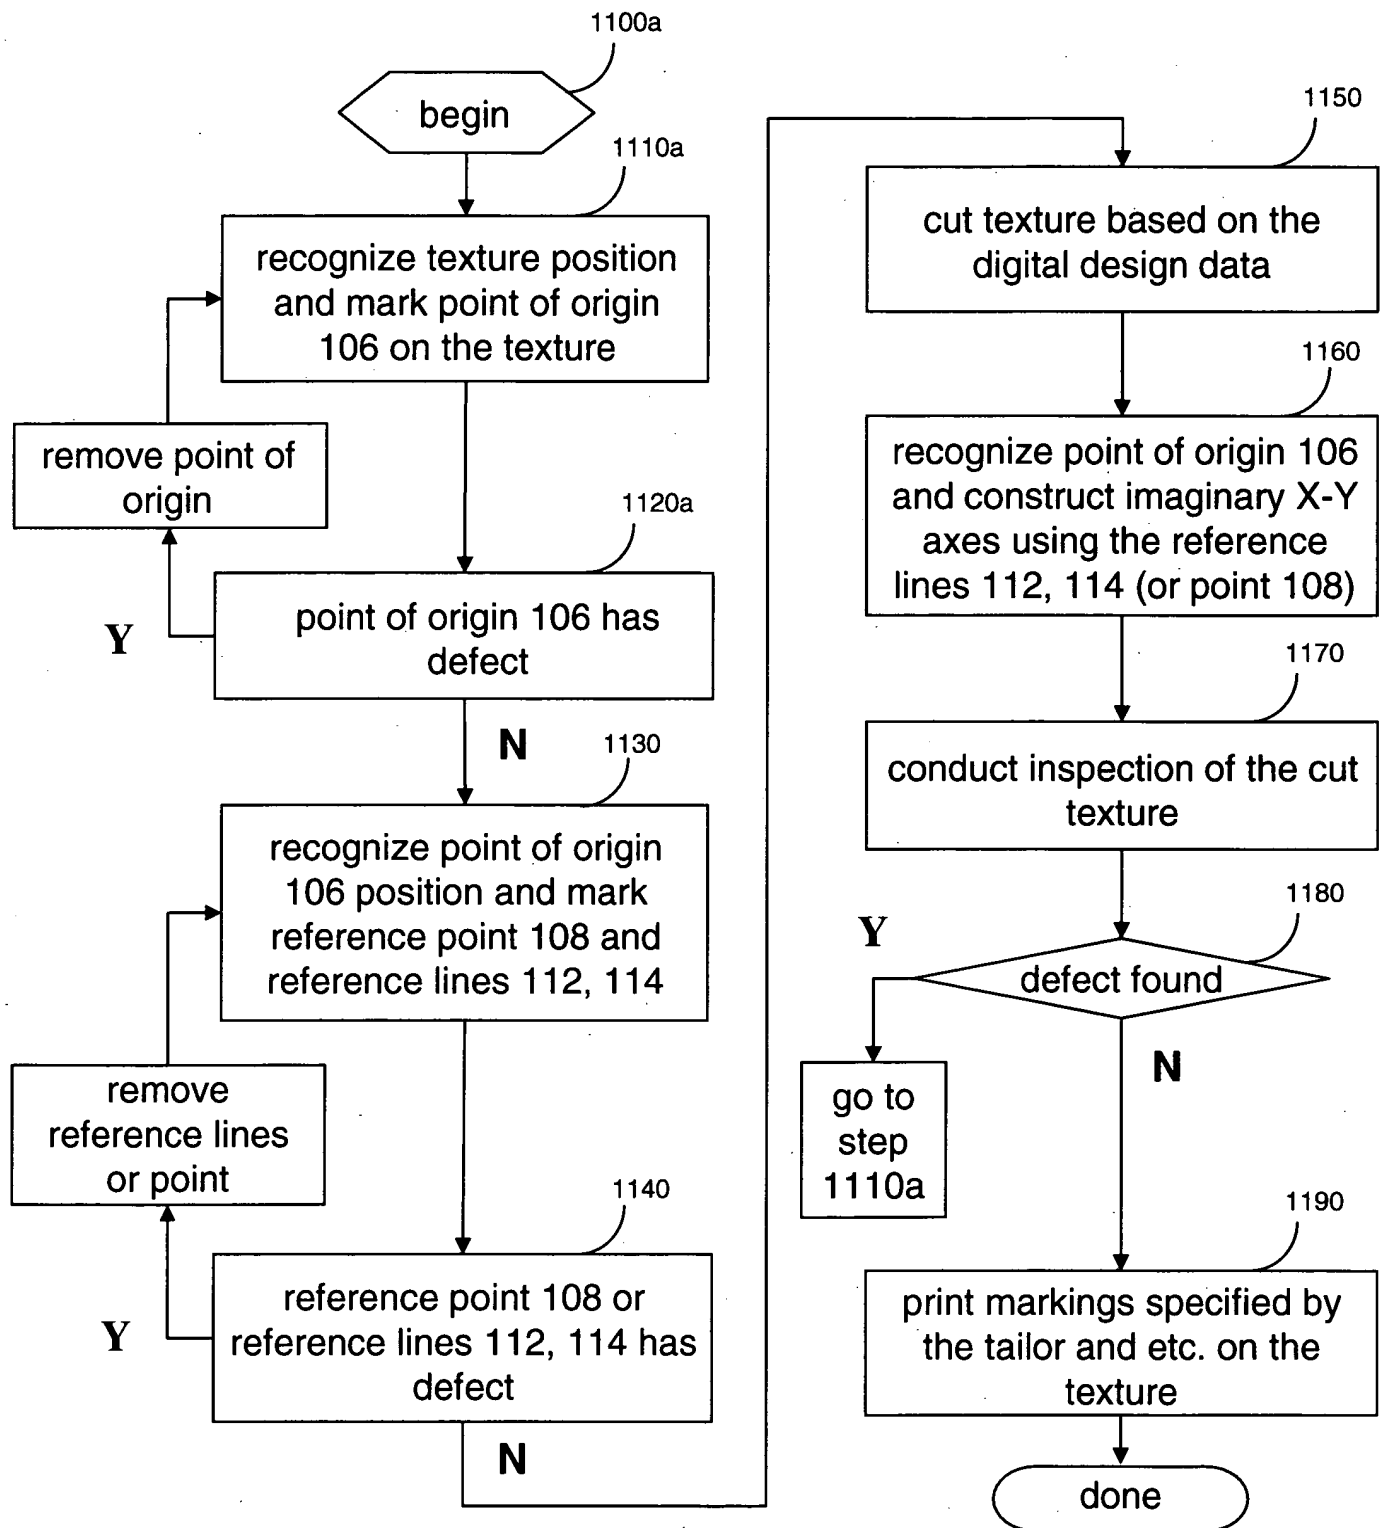


Figure 11B

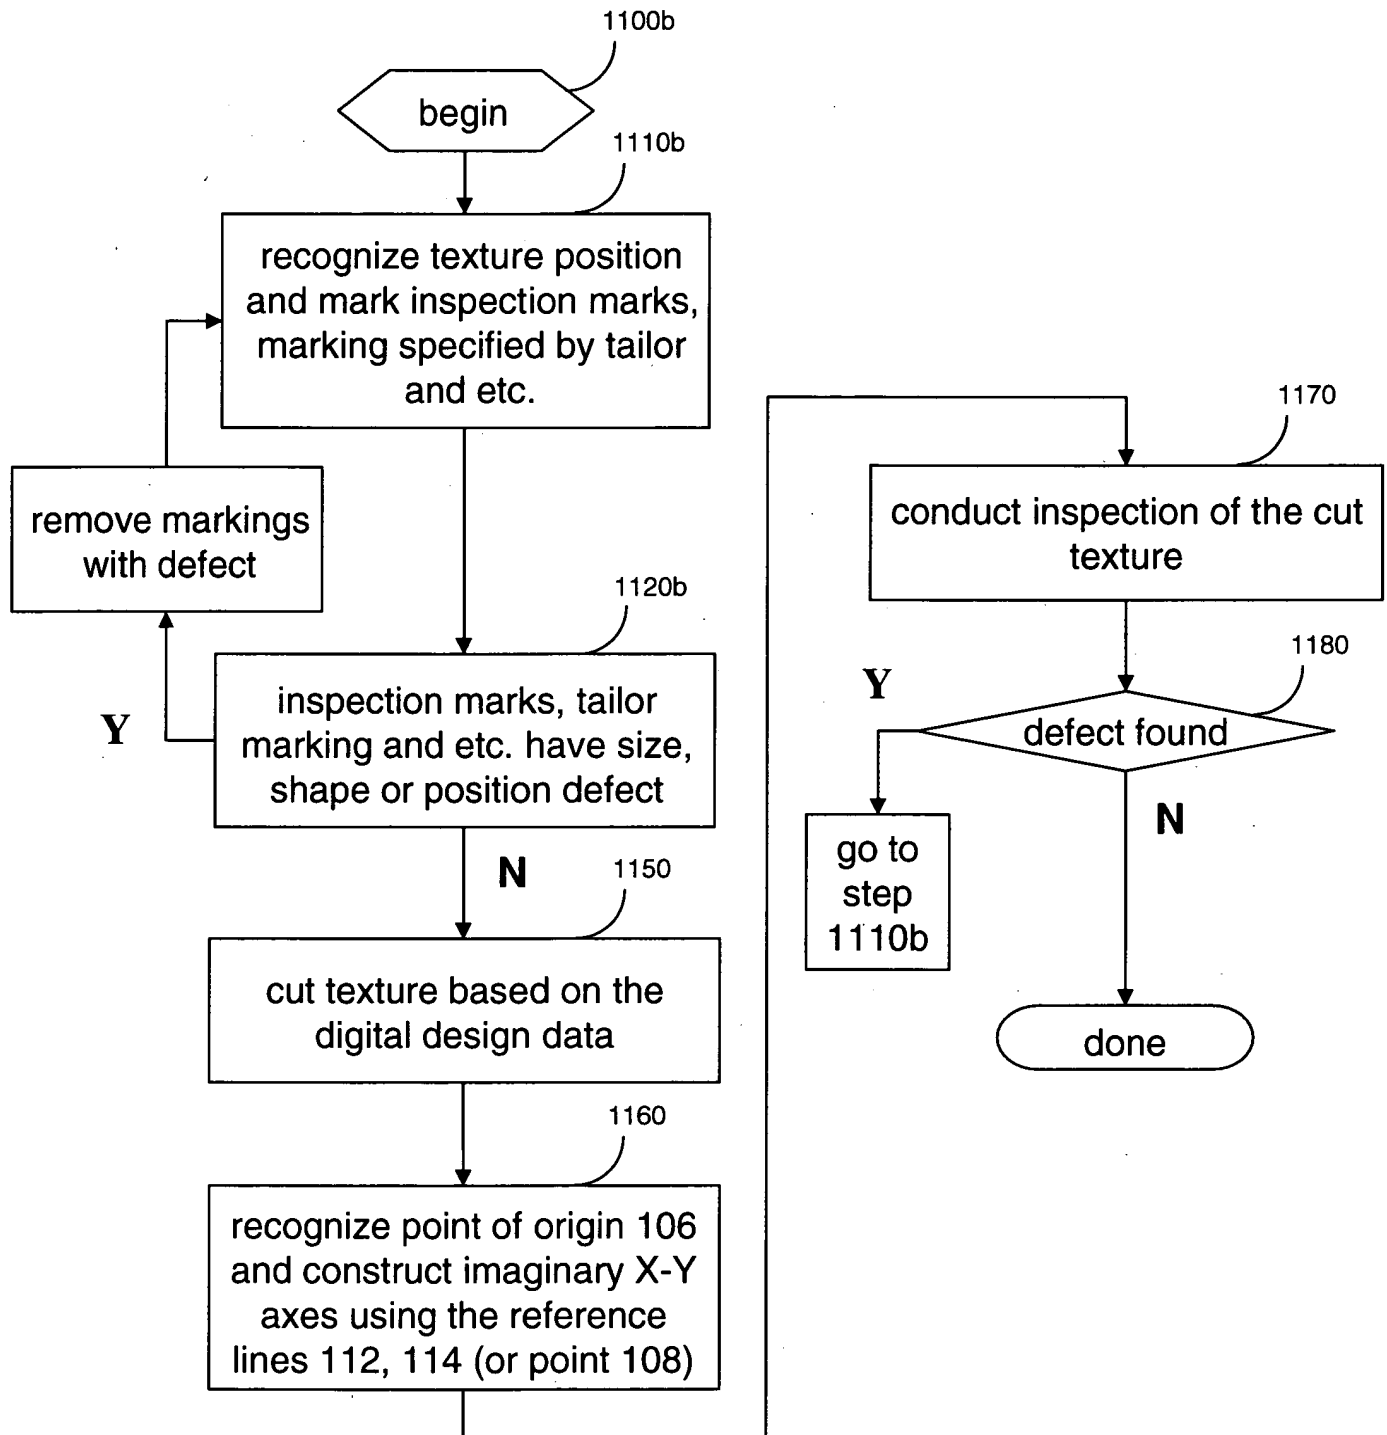


Figure 12A

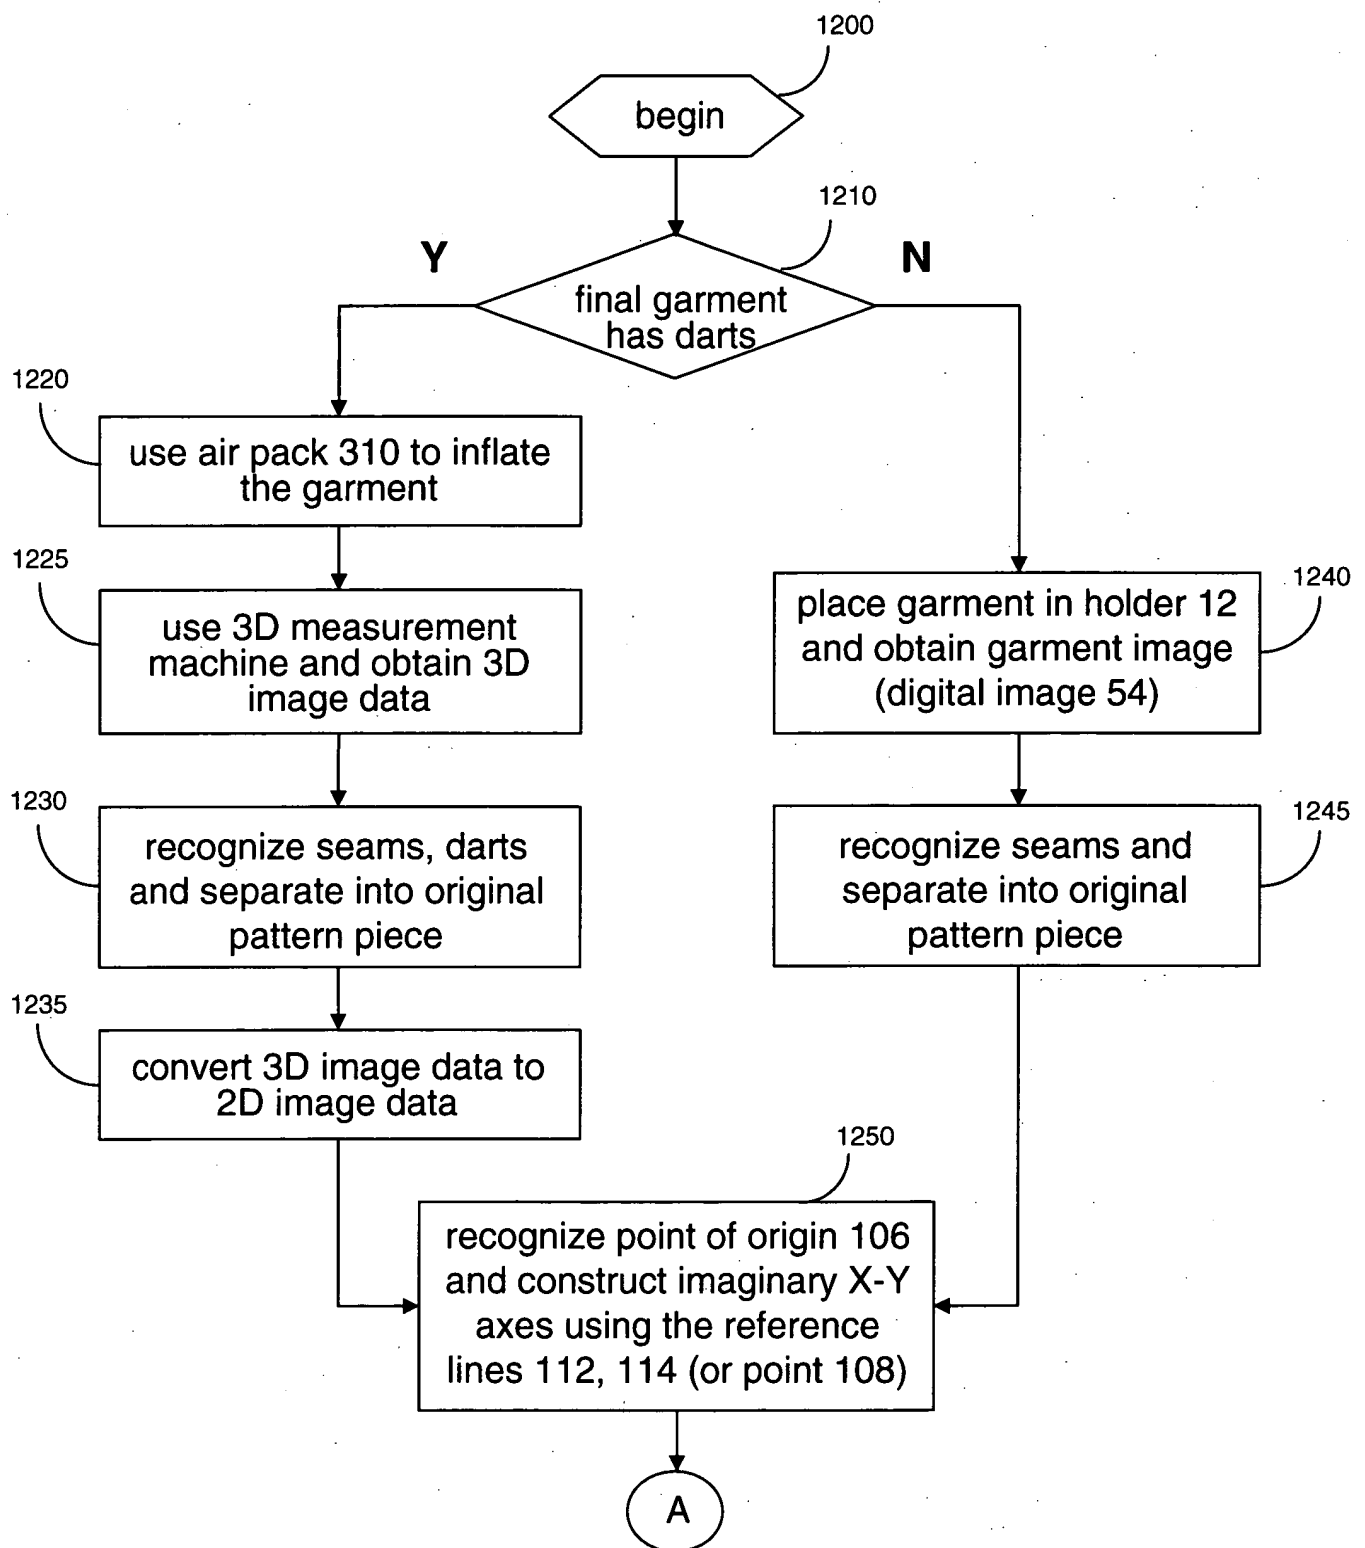
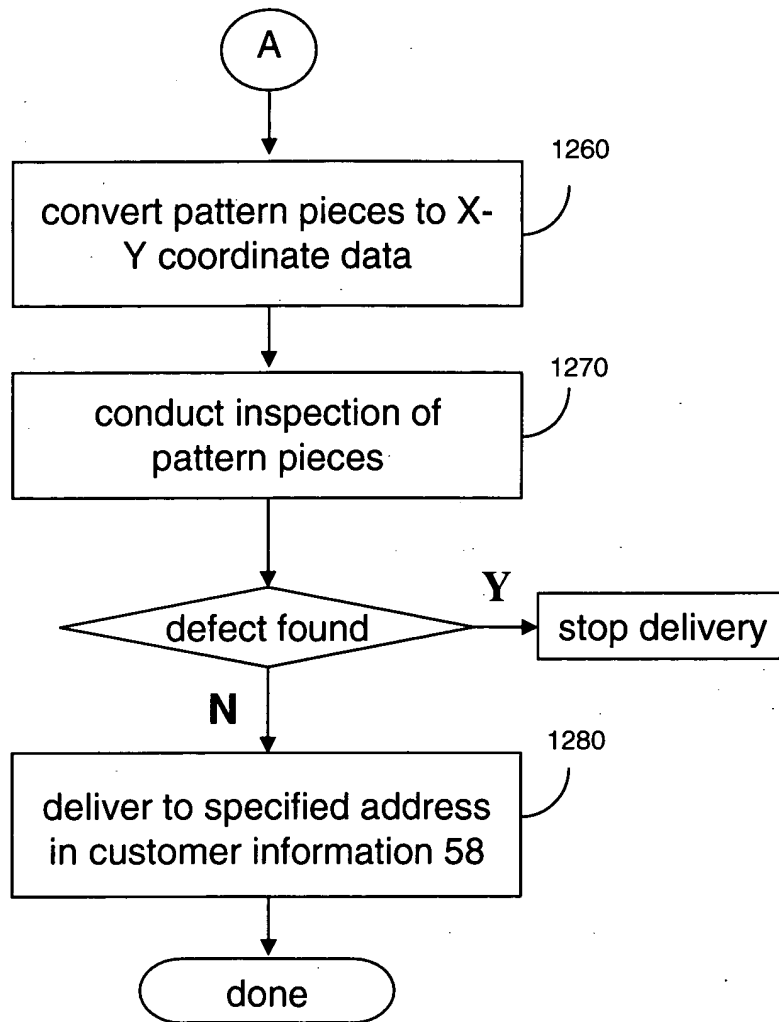


Figure 12B





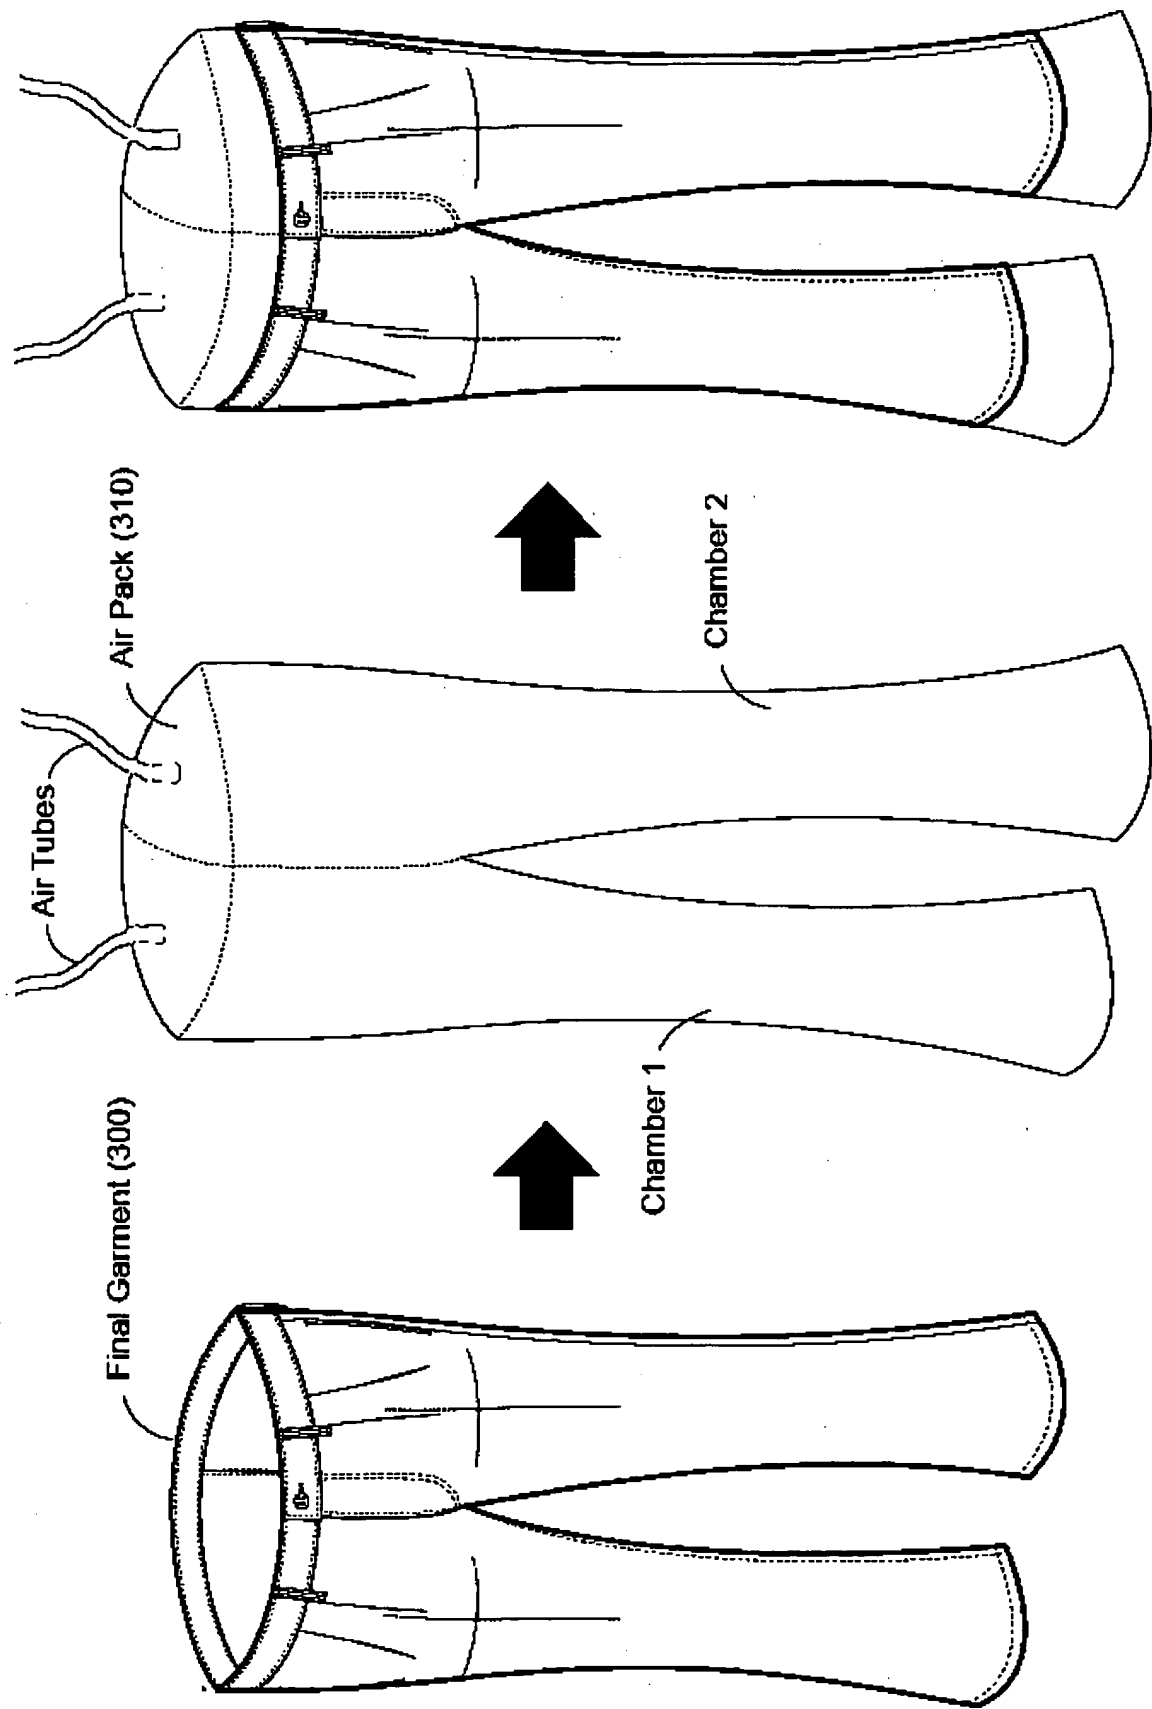




Figure 13

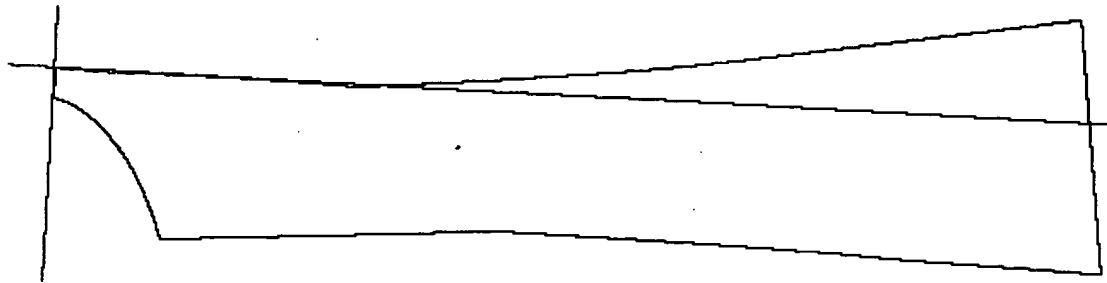

A. Original

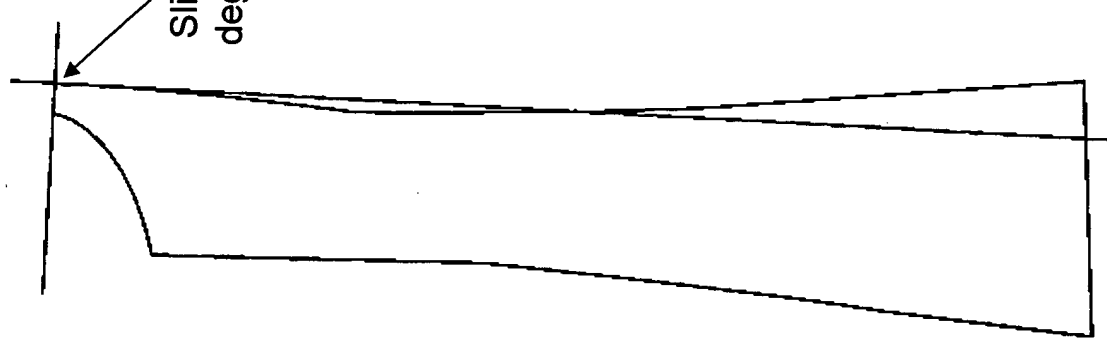

B. Skewed

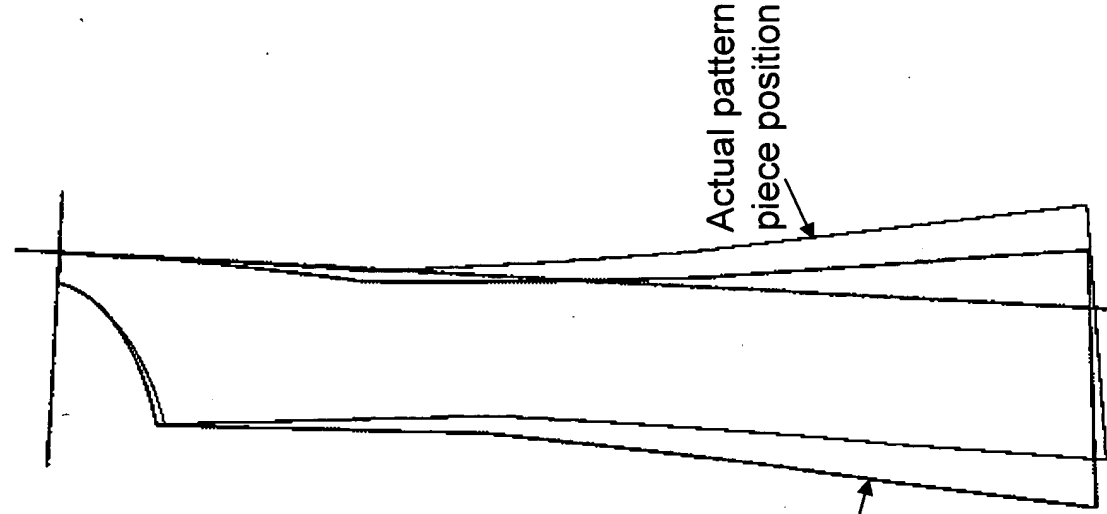

Inspection Result

Figure 14